


## Micro-Air MAQ replacement board

This board replaces the Cruisair / Dometic Q-logic board. OEM boards came with two different software configurations, one for DX or self-contained systems and one for tempered water or air handler applications. This one board replaces them both. Remove JP1 (CW ENABLE) to set the software for a tempered water (air handler) system.

Other differences are listed in the pictures below. Sensor, pressure switch, and display connections, as well as mounting is exactly the same as the board it replaces.

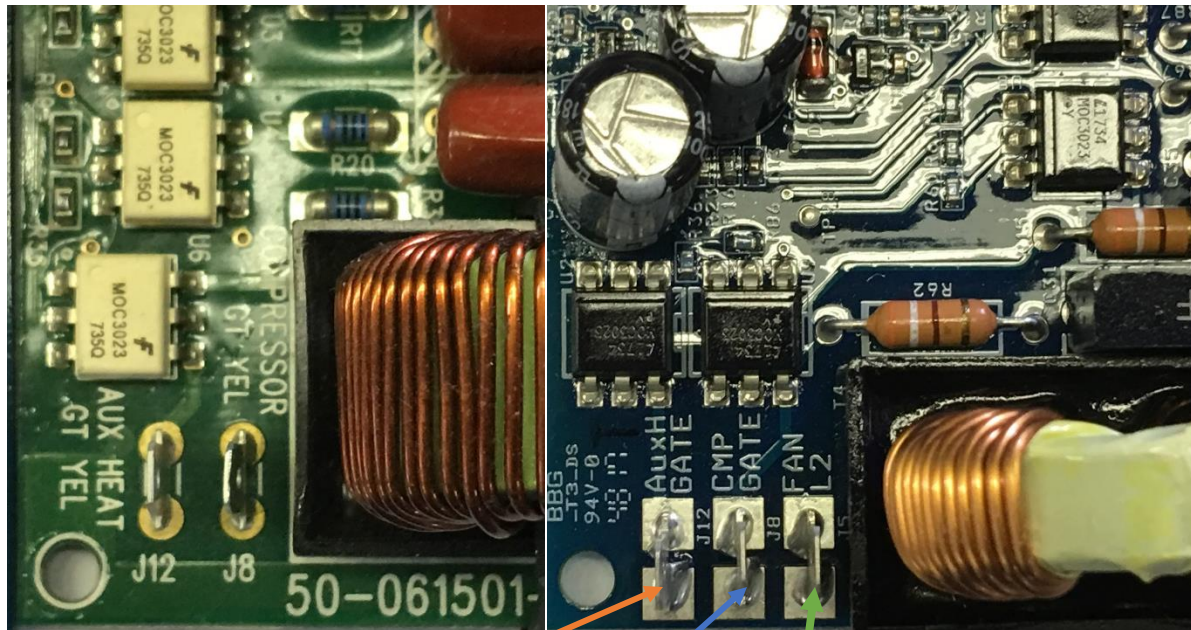

J12

J8

This connection must only be used for fan L2. It improves the fan electrical noise filtration which can be a problem in some systems. Do not connect valve, compressor or pump L2 here or the board may be damaged.

