

RV Soft Starter Comparison

Feature	Micro-Air EasyStart Breeze	Eltwin Hyper SureStart	Dometic SmartStartRV	Inverters-R-Us SpartanStart	SoftStartRV
Basic Installation hardware included	⊘				Ø
Made in USA	Ø				
Molded mounting brackets	⊘				Ø
Over/under voltage protection	⊘				
In-Rush Current Reduction (specified or claimed)	up to 75%	60%	60%	60%	70%
IP65 Weatherproof Enclosure	Ø				
US-based factory technical support	Ø				
Overcurrent Protection	Ø				
Factory wired leads	Ø				Ø
Built-in Start Capacitor	Ø	Ø	Ø	Ø	Ø
Reduce loud startup noise, light flicker, and breaker trips	⊘	Ø	Ø	Ø	Ø
120-240VAC Applications			Ø		Ø
Prolong the life of the A/C by reducing excessive torque, electrical stress, wear & tear	⊘	Ø	Ø	Ø	Ø
LED Fault Indicators	Ø				
Company has >100,000 Units in the field and over 12 years of product development	⊘	Ø	Ø	Ø	
Manufacturer's Warranty	2 years*	1 year	1 year	1 year	3 years
Sophisticated multi-start, one-time, resettable learning algorithm	②	continuous learning**	continuous learning**	continuous learning**	uknown
Real Head-to-Head In-Rush Current Reduction Test Results	best in class	~30% worse	~30% worse	~30% worse	~20% worse
UV Resistant Plastic	Ø	uknown	uknown	uknown	uknown
Superior hardware design with high margin components for ultimate durability	⊘				
Full Line-Voltage Disconnect Capability for Better Compressor Protection					
Open Compressor Overload Detection	⊘				
Stall Detection (compressor rotational speed)					
Bluetooth Connectivity for diagnostics, settings, and OTA firmware updates	⊘				
Advanced Intelligent Short-Cycle Delay Timer that prevents unnecessary startup delays	⊘				
UL Agency Approval	⊘	⊘		⊘	
One Model for All size Applications, 1-6 tons					
Overall Enclosure Size	5.80" x 3.46" x 1.83"	8.00" x 3.25" x 2.25" ***	8.00" x 3.25" x 2.25" ***	8.00" x 3.25" x 2.25" ***	5.60" x 2.90" x 2.00"

Kev

Micro-Air Exclusive Offering

^{*}Includes Double Down Warranty: Extended RV compressor warranty for systems <6 years old

^{**}Continuous learning algorithms are proven to be problematic when switching between generator and utility power

^{***}Measurements do not include mounting flange