

1. Before Easy Start installation!
All start component connections and wires need to be removed where you see a yellow **X**

2. Where you see the red circle remove the fan wire from the start assist.
Where you see the red arrow pointing to on the run-capacitor common place the fan wire you just removed from the start assist.

3. Put Easy Start Black with compressor common on #6 under the screwhead.



4. Put Easy Start Orange on the run-capacitor Herm (H) position.

5. Remove compressor run wire at #2 and Splice to Easy Start Brown.

6. Where you removed the last connection on #2 Put Easy Start White under the screwhead.


NOTES

A THE 222003-06 TERMINAL IS APPLICABLE FOR ALL UNITS 7-35KBTU. THE 24KBTU COMPRESSOR DOES NOT HAVE AN EXTERNAL OVERLOAD. THE WIRE CONNECTS DIRECTLY TO THE 'C' POST ON THE COMP. WITH A 222004-01 TERMINAL

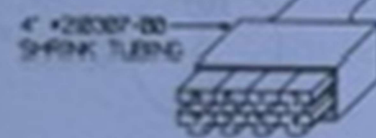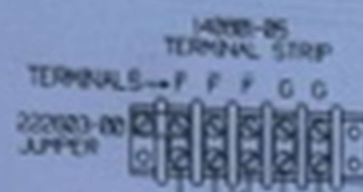

- WIRE COLOR & NUMBER
- 1 RED #16
 - 2 ORANGE #16
 - 3 BLUE #16
 - 4 BLACK #16
 - 5 WHITE-BLACK #16
 - 6 WHITE #16
 - 7 PURPLE #16
 - 8 GREEN #16

- TERMINAL DESIGNATIONS
- 222003-01 RUN CAP
 - 222003-02 RUN CAP
 - 222003-03 RUN CAP
 - 222003-04 RUN CAP
 - 222003-05 RUN CAP
 - 222003-06 RUN CAP
 - 222003-07 RUN CAP
 - 222003-08 RUN CAP

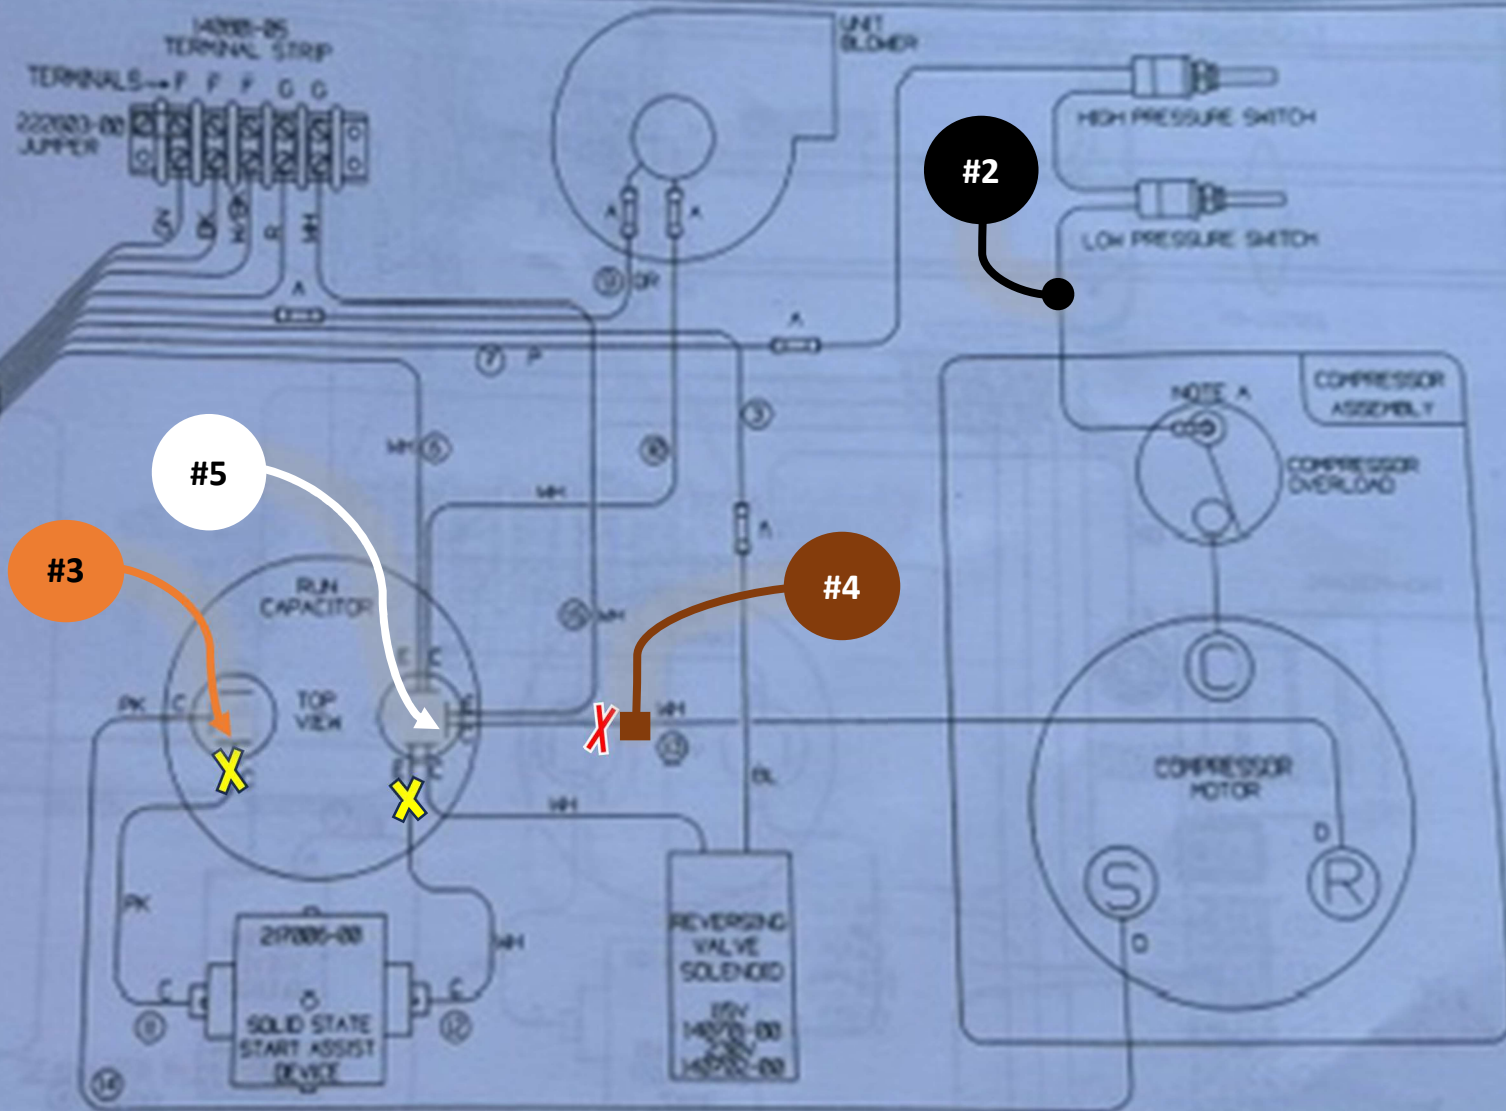

#2

#5

#3

#4

1. Before Easy Start installation!
All start component connections and wires need to be removed where you see a yellow X

2. Put Easy Start Black with compressor common on in a 3-way splice.

3. Put Easy Start Orange on the run-capacitor Herm (H) position.

4. Remove compressor run wire at the run-capacitor and Splice to Easy Start Brown.

5. Where you removed the last connection Put Easy Start White on the run capacitor.

AQUA-AIR MARINE AIR CONDITIONING SYSTEMS

SMR-07K TO 24K
INTERNAL WIRING SCHEMATIC

REV 4010-04	DATE 04-03-01
BY NONE	BY A