

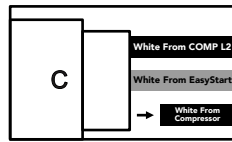


**STEP 1: Disconnect WHITE wire\***

\*Make sure you are disconnecting the white wire on the run capacitor coming from the unit's compressor.

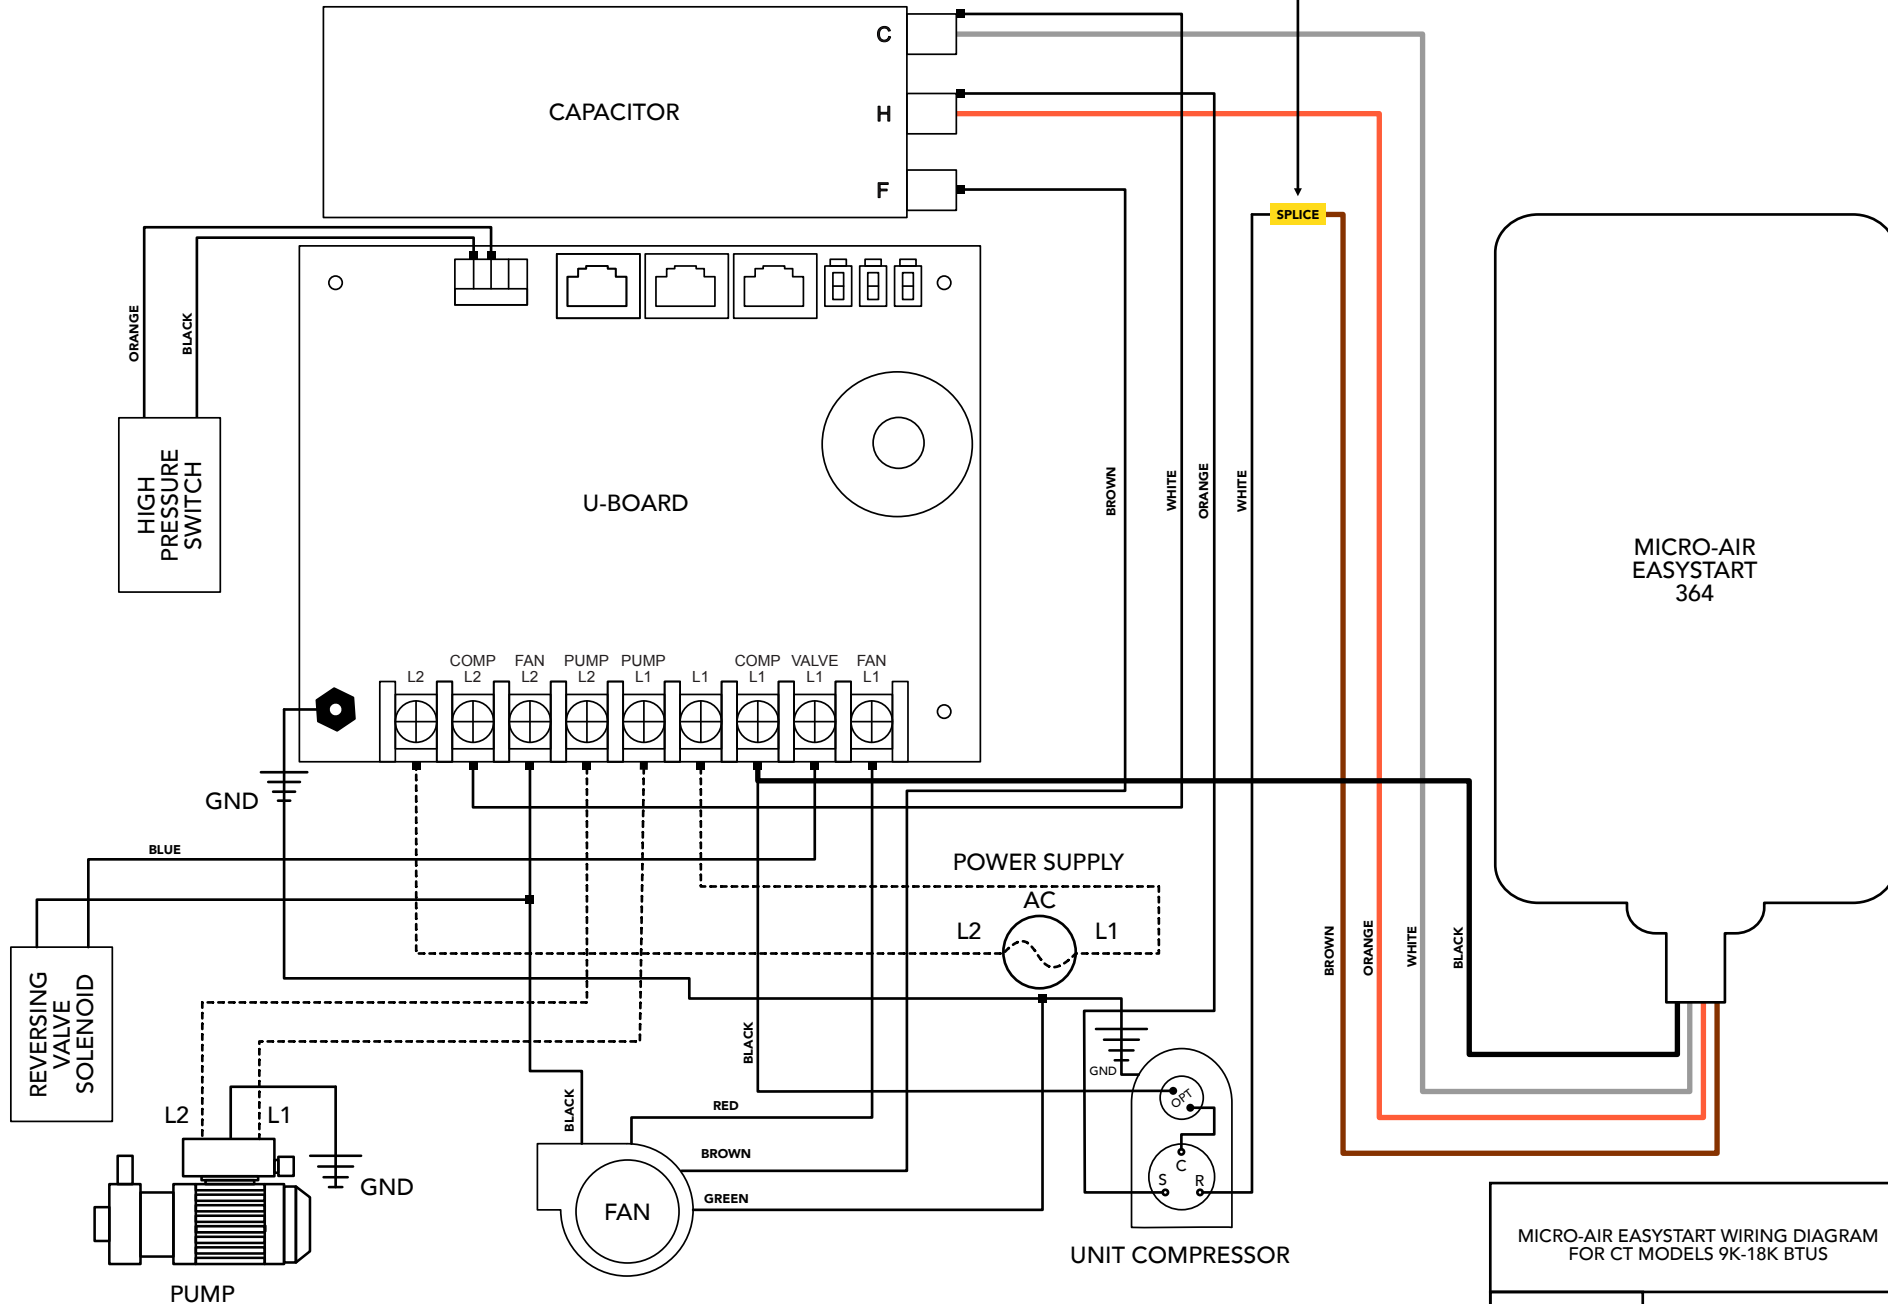

**STEP 2: Connect WHITE wire from the compressor to BROWN wire from EasyStart.**

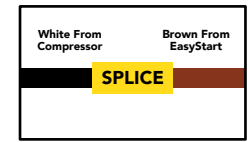

MICRO-AIR EASYSTART WIRING DIAGRAM FOR CT MODELS 9K-18K BTUS

