



**1. Before Easy Start installation!**  
 Be sure your Easy Start is correctly sized according to your voltage and BTUs.  
 Go here <https://www.micro-air.com/tools/easystart/modelselectorv3/step1.cfm>  
 to the selector page from our website.

**2. Put Easy Start Black with compressor common on the terminal under the screwhead using a fork or ring terminal connector.**

**3. Put Easy Start Orange on the run-capacitor Herm (H) position.**

**4. Remove compressor run from the run-capacitor and Splice to Easy Start Brown.**

**5. Where you removed the last connection on the run-capacitor Put Easy Start White.**

**Pompanette LLC., Tampa FL**  
**7,000 Thru 16,000 120 V - 230**  
**Self Contained AC Wiring**