



Installation Instructions:

USE THE EASYSTART 368 FOR ALL GRUNERT APPLICATIONS SINCE THE LARGE START CAP IS REQUIRED, EVEN THOUGH THE HP/FLA IS LOW ENOUGH FOR THE EASYSTART 364.

- 1) Remove the wires from the relay as indicated and splice together
- 2) Remove the wire labeled "RUN" from the terminal block and terminal 4 on the relay.
- 3) Remove the fan/pump L2 wire from terminal 11 and connect it to the run cap as shown.
- Connect the four EasyStart wires to the locations indicated in the drawing.
- 5) Remove the start capacitor and start relay.