


EasyStart 364

- = 3-way end splice
- = butt splice

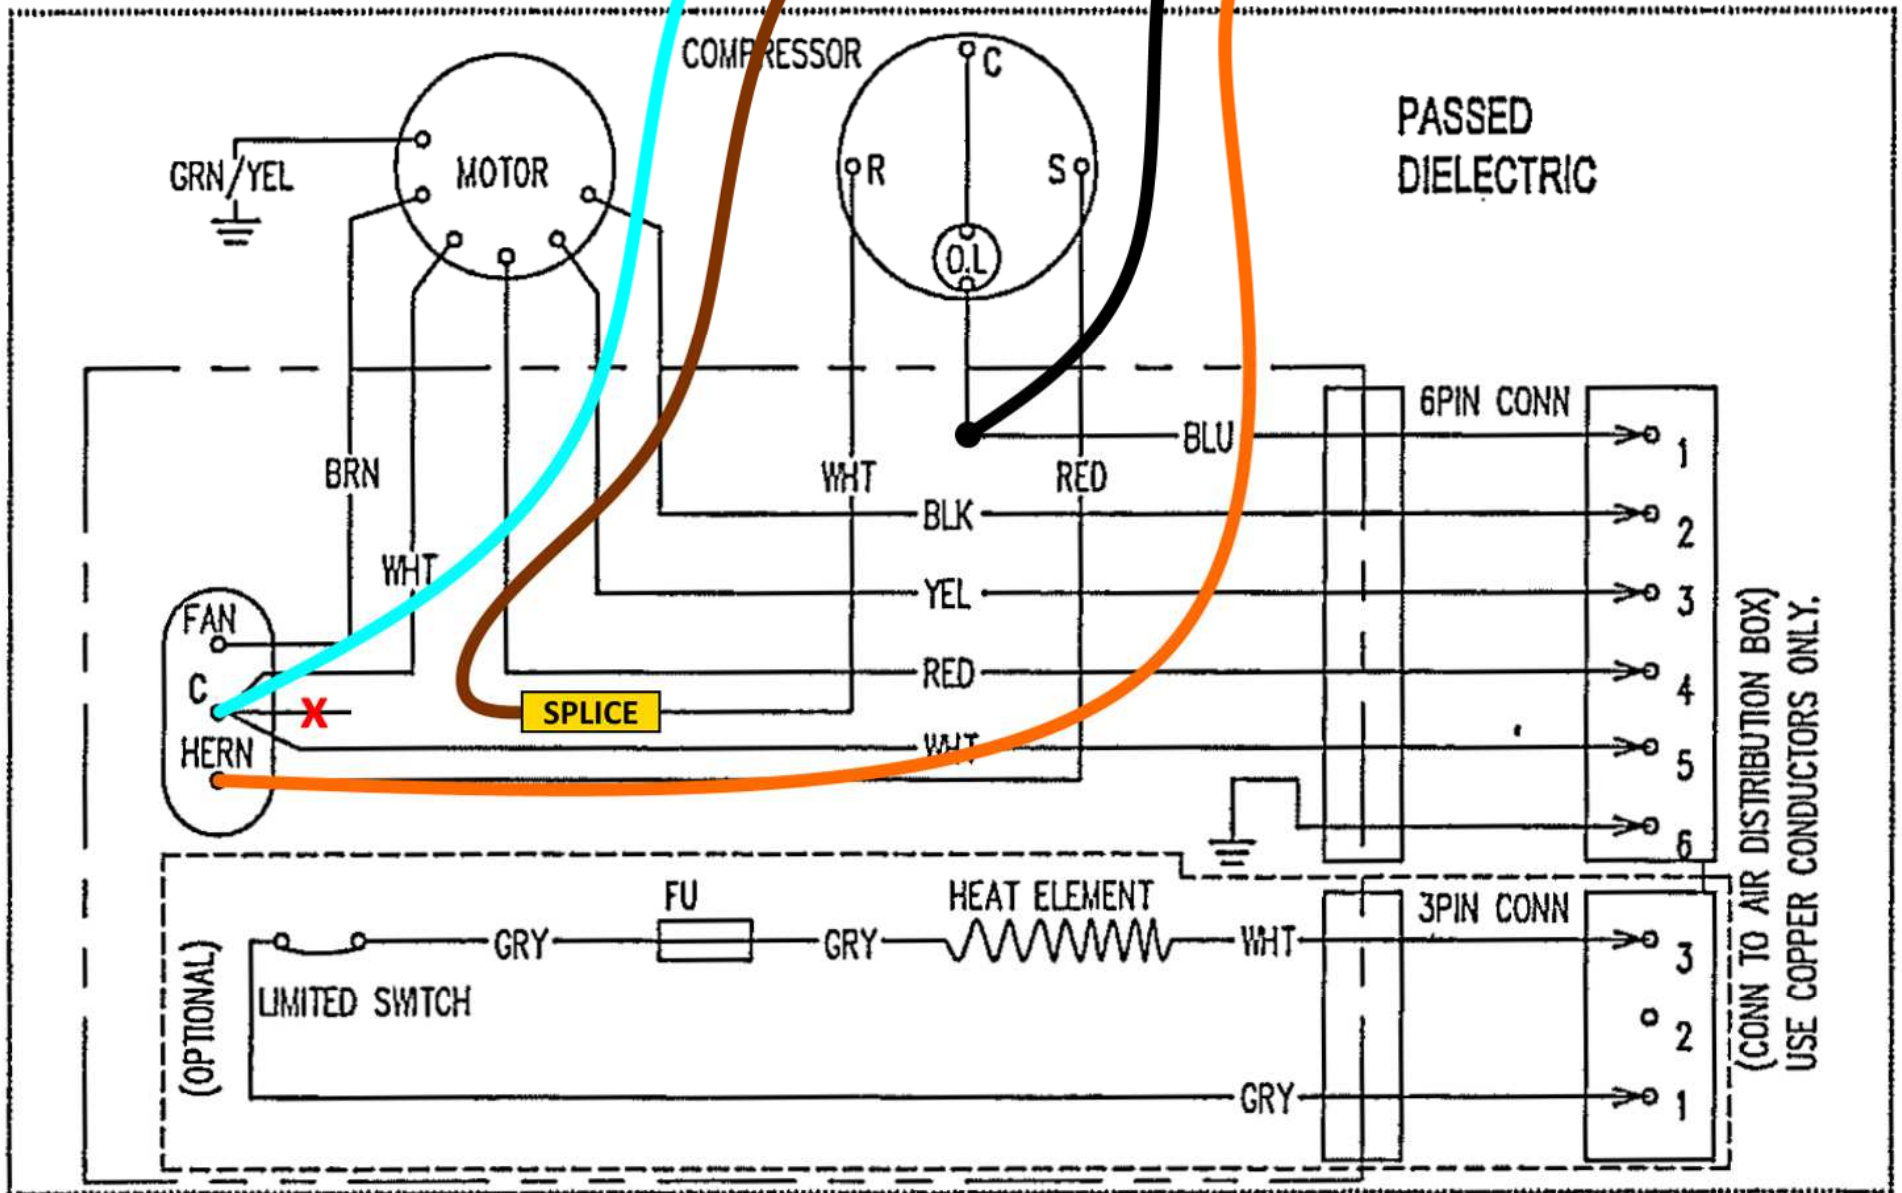

(CONN TO AIR DISTRIBUTION BOX)
USE COPPER CONDUCTORS ONLY.