


Passport 1 & Easy Start Wiring

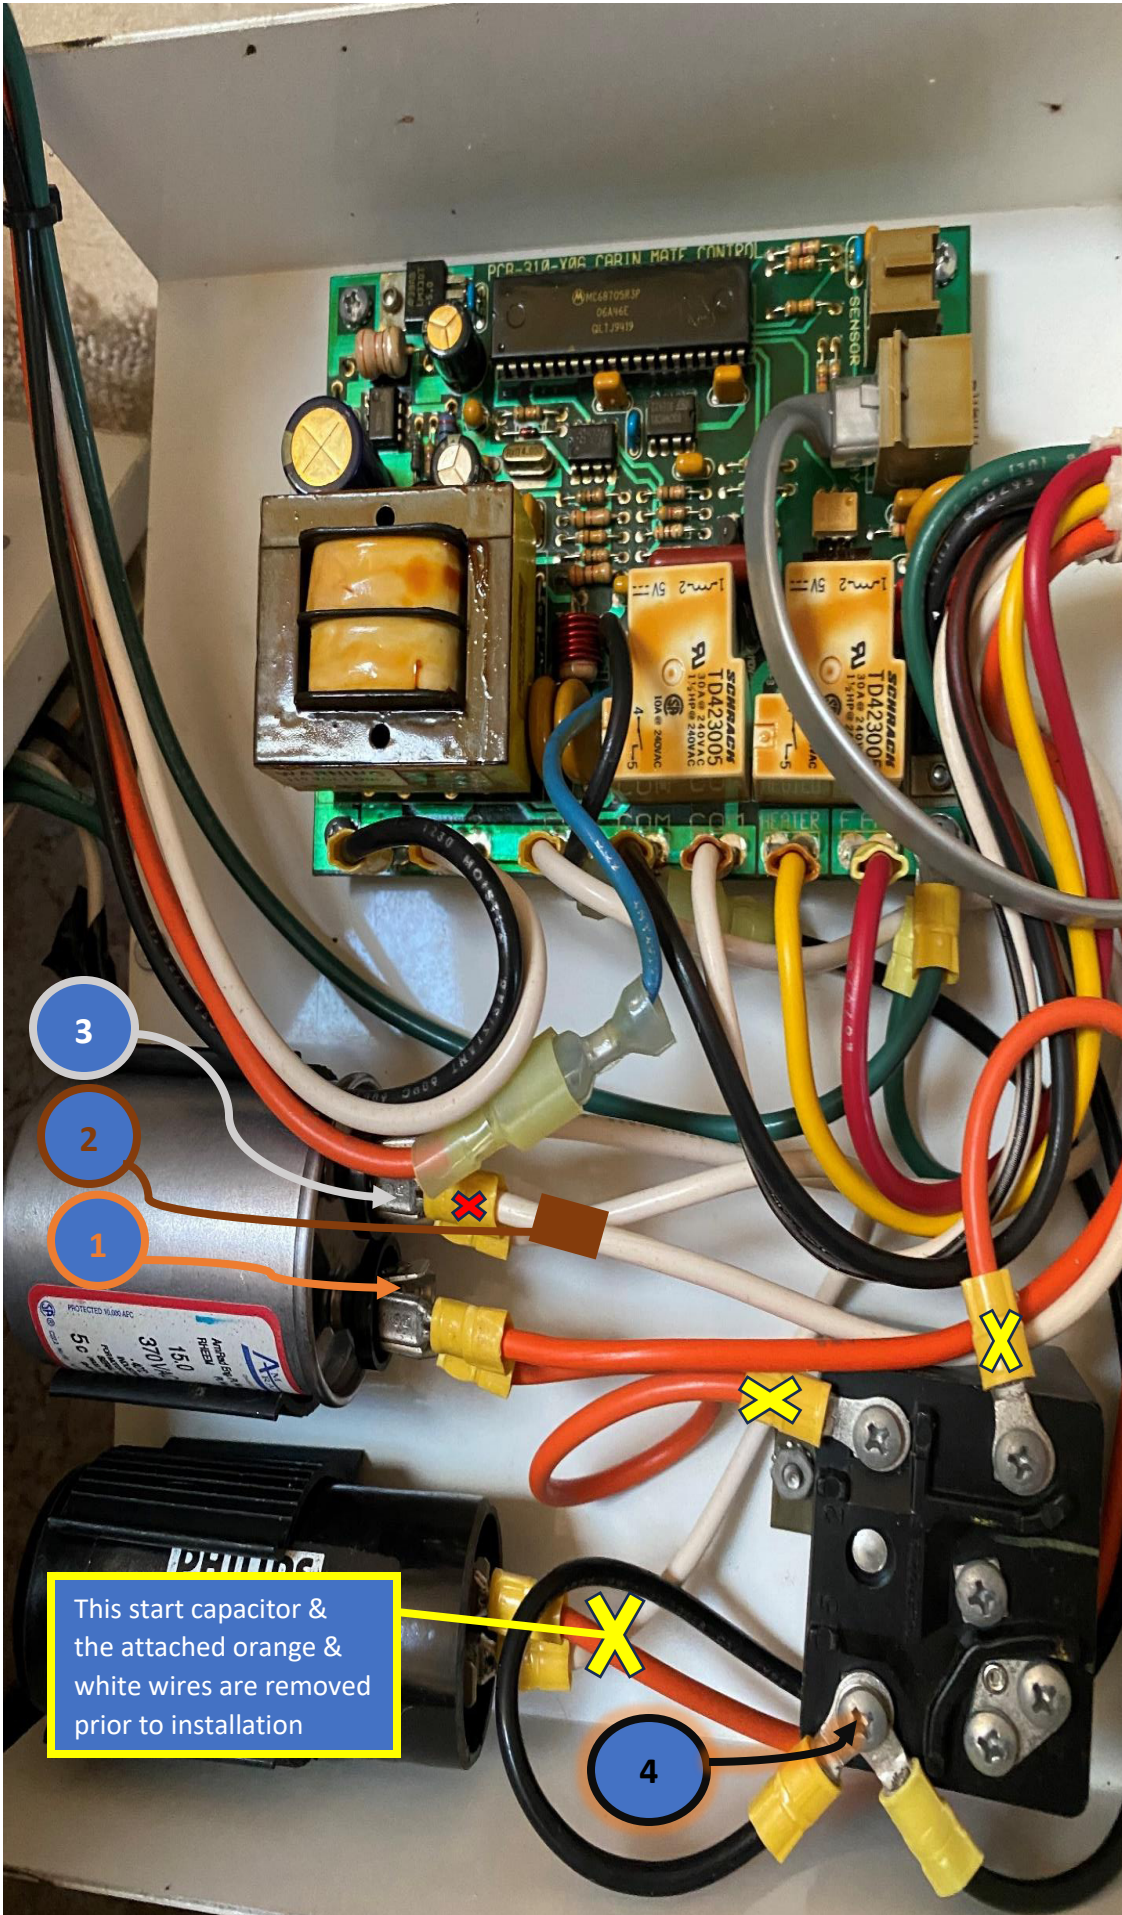

Notes in yellow

Completely remove the wires with the Yellow X's

1) The Easy Start Orange wire goes with the run capacitor orange wire

2) Remove the white compressor run wire from the run capacitor & splice into the Easy Start Brown wire.

3) Then where you just removed the wire in step 2, connect the Easy Start White wire.

4) Make a 3-way connection with the Easy Start Black wire & the two existing start relay black wires