


General Easy Start Wiring for applications with a Start Cap & Start Relay

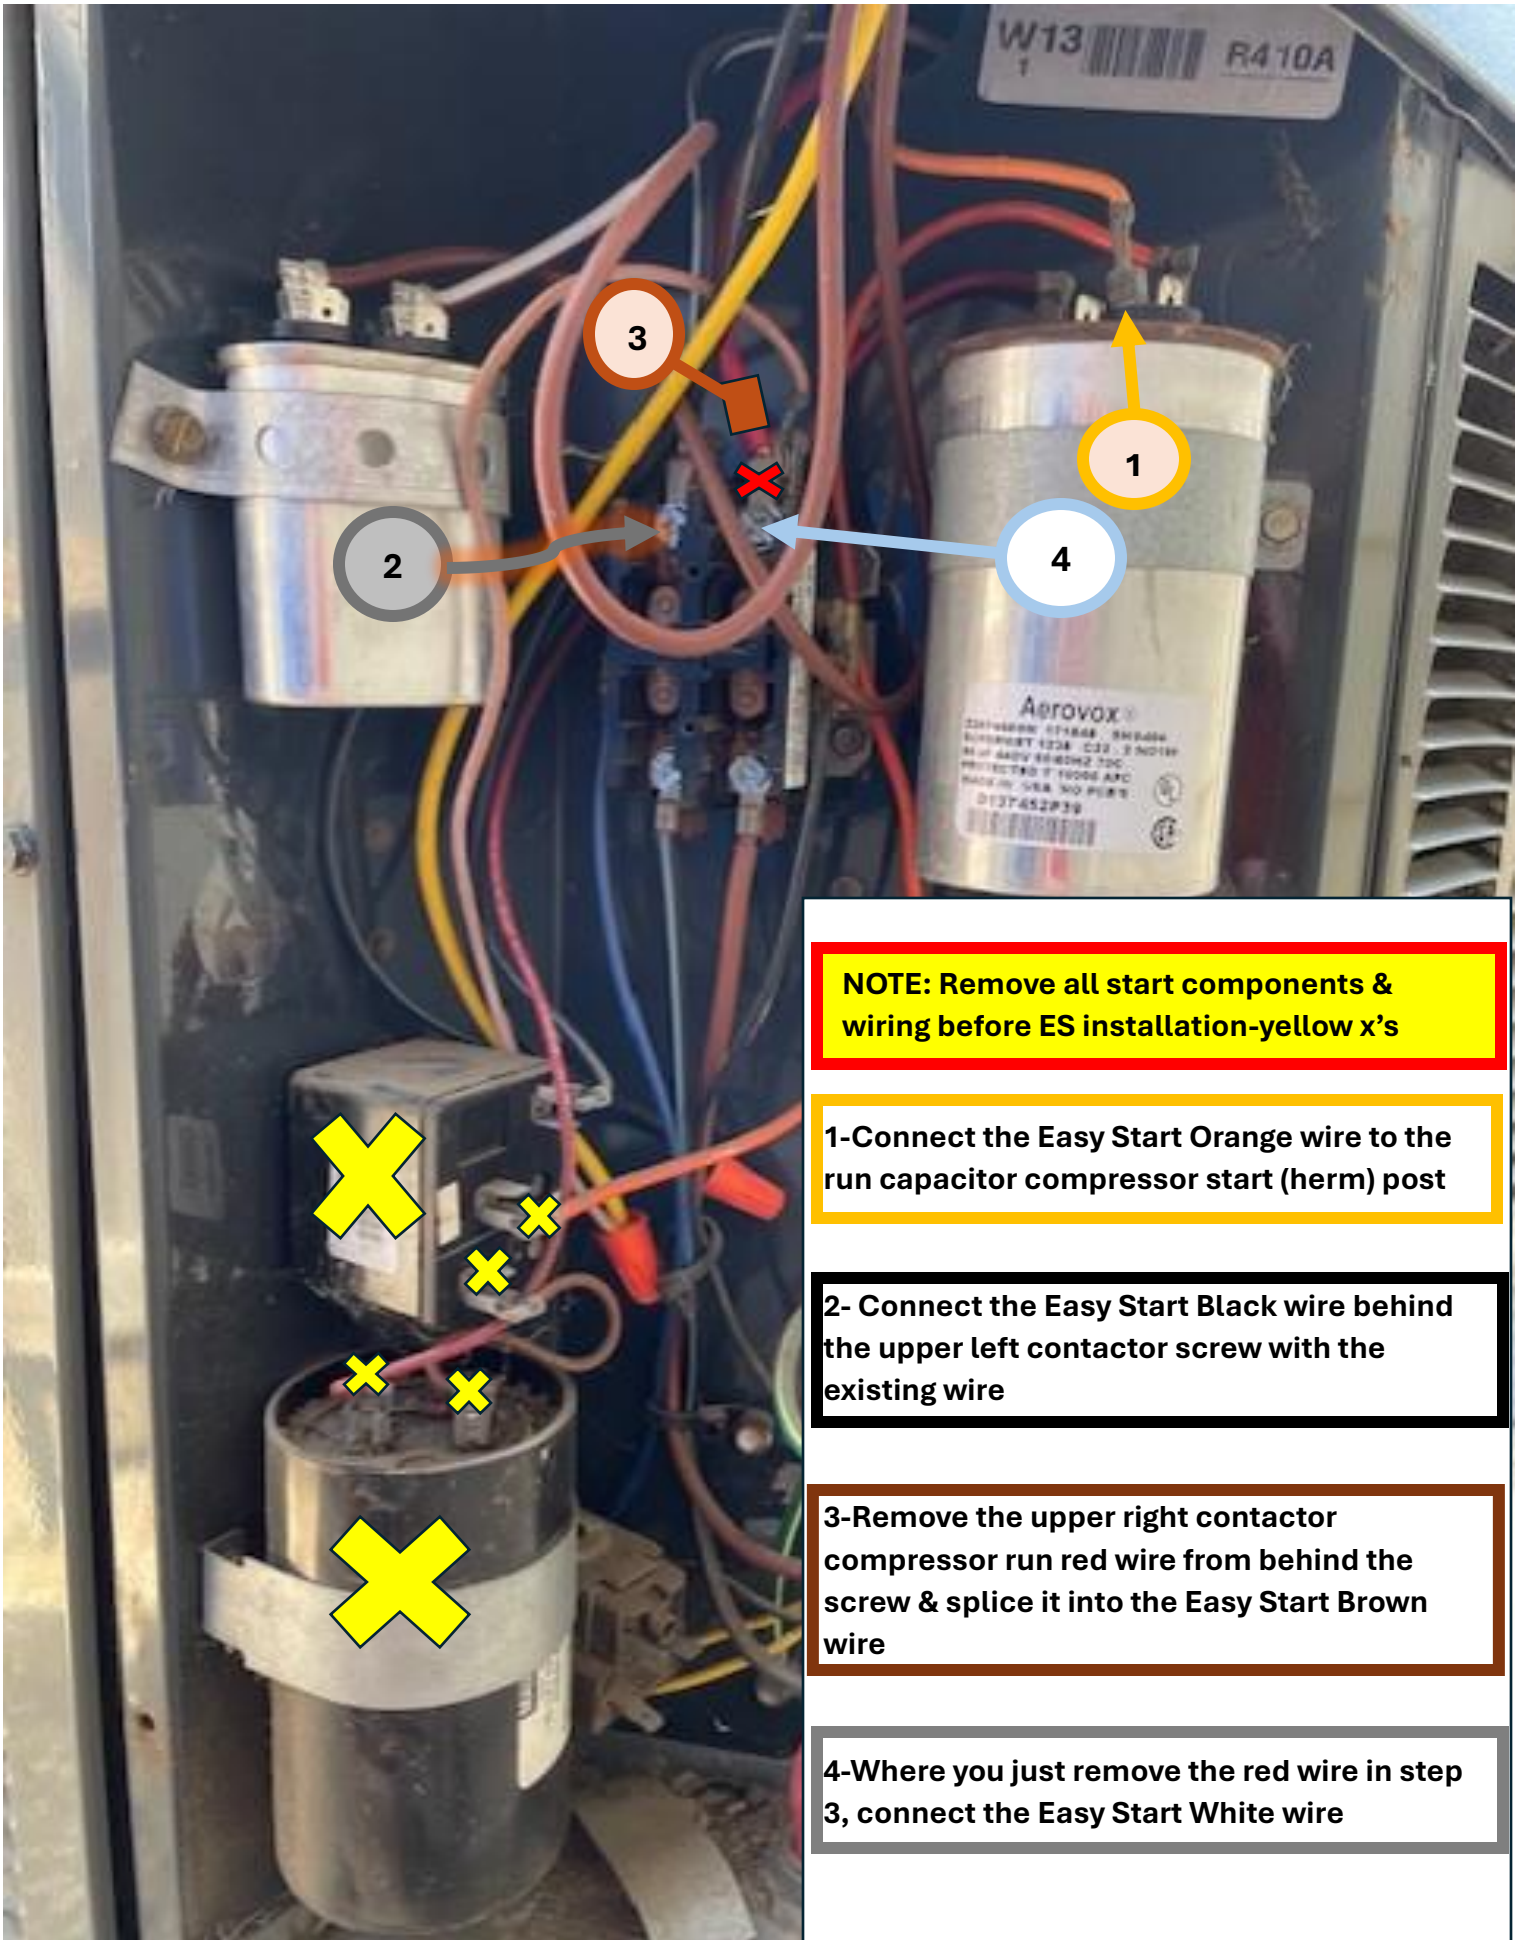

NOTE: Remove all start components & wiring before ES installation-yellow x's

1-Connect the Easy Start Orange wire to the run capacitor compressor start (herm) post

2- Connect the Easy Start Black wire behind the upper left contactor screw with the existing wire

3-Remove the upper right contactor compressor run red wire from behind the screw & splice it into the Easy Start Brown wire

4-Where you just remove the red wire in step 3, connect the Easy Start White wire