


SCHEMATIC WIRING DIAGRAM

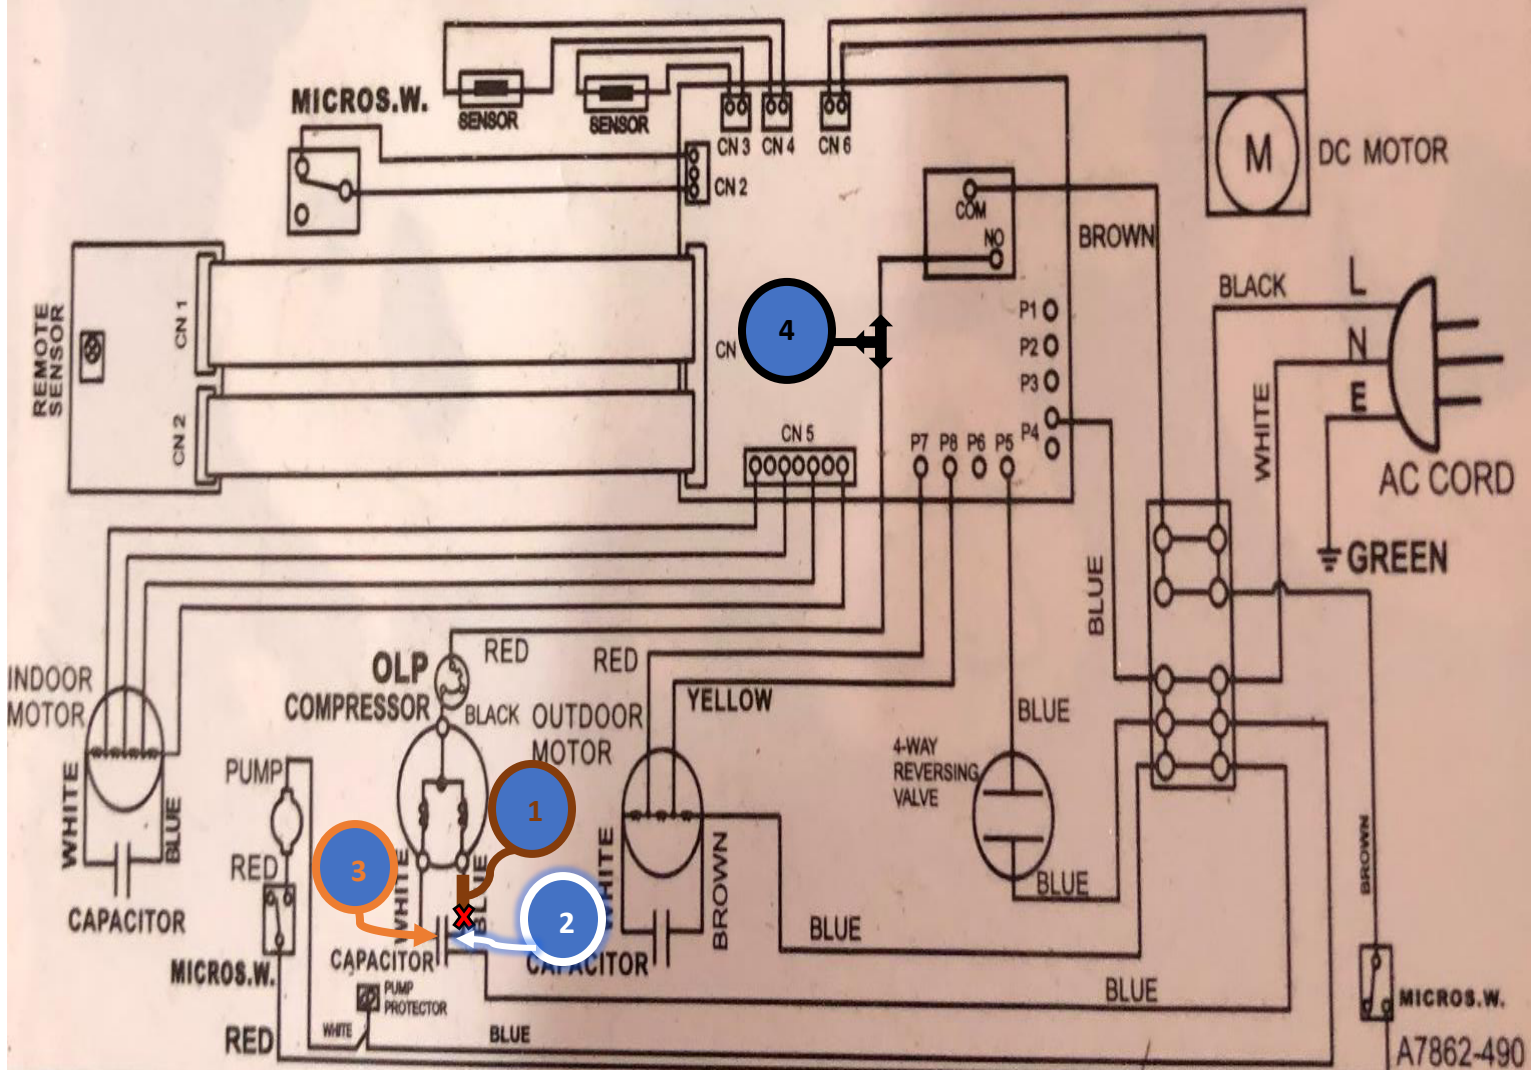

1) The compressor blue run (R) wire is removed from the run capacitor & splices into the Easy Start Brown wire

2) Where you just removed the blue wire in step 1, attach the Easy Start White wire

3) Connect the Easy Start Orange wire on the compressor (S) start side of the run capacitor next to the white wire

4) Make a 3-way splice with the compressor (C) red wire & the Easy Start Black wire