
Furrion 15.5Kbtu

Incase this schematic is incomplete, inspect the capacitor (CP) terminal for more than one wire. If there are two, trace the non-compressor wire to the source. If it is a smaller capacitor, remove this wire from the system completely.

Disconnect compressor (R) white wire from capacitor (COM). Connect this wire directly to EasyStart brown. Connect EasyStart white to capacitor (COM). Connect EasyStart orange to capacitor (CP). Splice EasyStart black into compressor (O.L.) blue at a convenient location.

Perform 5 learning starts on shore power before a limited power source.

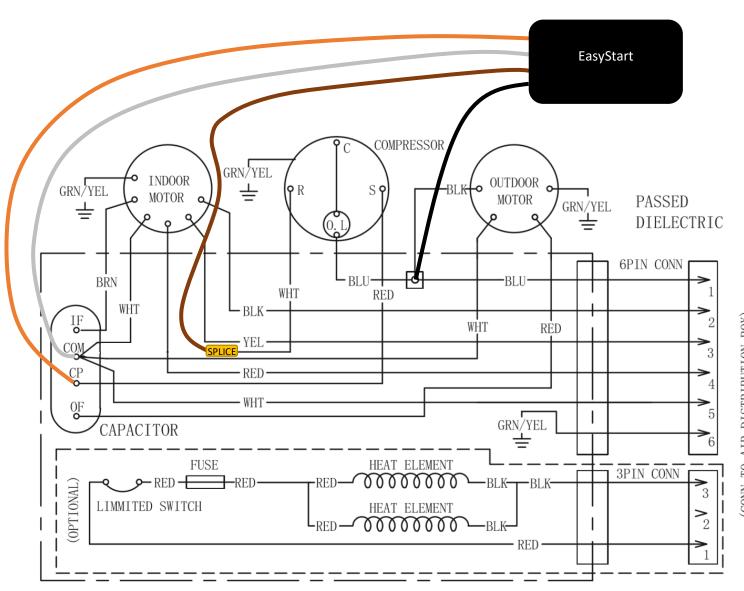

(CONN TO AIR DISTRIBUTION BOX) USE COPPER CONDUCTORS ONLY.