


Truma Aventa RV Easy Start Wiring

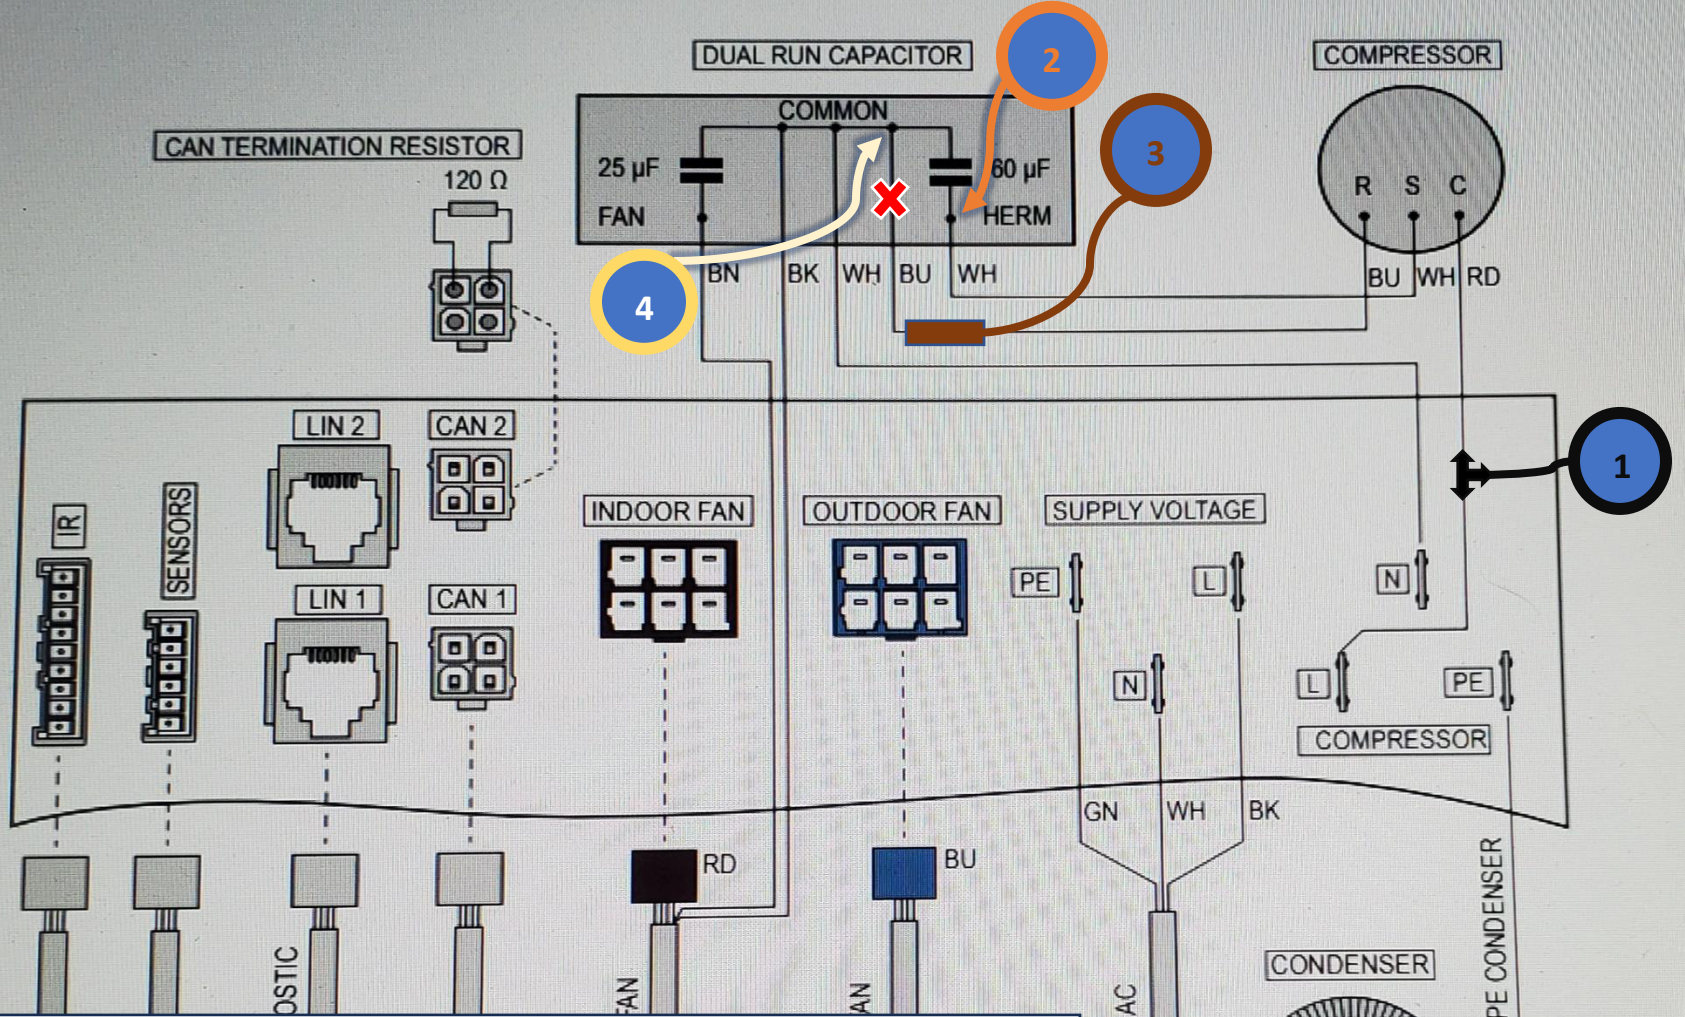

- 1) Make a 3-way splice with the compressor RD (red) (C) wire & the Easy Start Black wire
- 2) Install the Easy Start Orange wire on the run capacitor next to the WH (white) Herm (S) wire
- 3) Remove the compressor run BU (blue) (R) wire from the run capacitor & splice with the Easy Start Brown wire
- 4) Where you just removed the BU wire in step 3, connect the Easy Start White wire